

## CUSTOMER PROGRAMMING

Customer code change, alarm memory recall and alarm tests are all available from the customer programme. With the Day indicator showing, press the following buttons in the correct sequence.

### CODE CHANGE

Press **PROG** button All indicators will show

Enter your code

|   |   |   |   |
|---|---|---|---|
| ? | ? | ? | ? |
|---|---|---|---|

DAY and TAMPER indicators show

Press **8** Four Zone indicators show

Now enter your new code (4 digits)

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|--|--|--|--|

The system will bleep twice and DAY and TAMPER indicators show again.

Press **RESET** to return to Day The new code is now in the memory

### ALARM TESTS

Press **PROG** button All indicators will show

Enter your code

|   |   |   |   |
|---|---|---|---|
| ? | ? | ? | ? |
|---|---|---|---|

DAY and TAMPER indicators show

Press **0** DAY, TAMPER and ATTACK indicators show

The system is now in the test routine

Press **2** To test the strobe

Press **0** to stop

Press **3** To test outside bell/sounder

Press **0** to stop

Press **4** To test low volume inside sounder

Press **0** to stop

Press **2** **4** To test high volume inside sounder

Press **0** to stop

Press **5** To enter walk test. The sounder will now bleep each time a zone is opened.

Press **0** to stop

Press **RESET** **RESET** to return to Day

### ALARM MEMORY CALL

Press **PROG** button All indicators will show

Enter your code

|   |   |   |   |
|---|---|---|---|
| ? | ? | ? | ? |
|---|---|---|---|

DAY and TAMPER indicators show

Press **MEM** button The last alarm will now be displayed for 5 seconds. The system will bleep and DAY and TAMPER indicators will show again.

Press **RESET** to return to Day